AD-8526 イーサネット・コンバータ 取扱説明書



計量機器のRS-232C出力をコンピュータのイーサネット(LAN)ポートに接続するコンバータです。 AD-8526を利用することで、LANポートと計量機器のRS-232Cポートを中継して、ネットワークを利用した 計量データの管理ができます。



- 通信ケーブルは、注文時のご指定により 下記のケーブルのみが付属されている場合があります: Din 7 ピン/D-sub 9 ピン (AX-K01786-200)
- ご指定のない場合は、D-sub 25 ピン/D-sub 9 ピン(AX-K01710-200)および D-sub 9 ピン/D-sub 9 ピン(AX-K02466-200) の2本が付属しています。

什様

1. 一般仕様		3. RS-232Cインタフェース				
動作温度範囲	$-10^{\circ}\mathrm{C} \sim +40^{\circ}\mathrm{C}$	コネクタ	D-Sub9ピン・オス			
電源	ACアダプタ(50/60Hz 100V+10V、-15V)	伝送形式	調歩同期式、双方向通信			
外形寸法	113 (W) \times 60 (D) \times 38 (H) mm	信号形式	ボーレート : 600、1200、2400 [×] 、4800、9600、19200bps			
本体重量	約250g		データビット :7ビット*、または8ビット			
2. イーサネットインタフェース			パリティ : EVEN [*] 、ODD、NONE			
コネクタ	RJ45		ストップビット:1ビット*、または2ビット			
プロトコル	TCP/IP		※ 出荷時設定			

-ブルの適合機種

AD-8526と接続す	るために必要となるもの
-------------	-------------

適合機種	計量機器側のインタフェースオプション	通信ケーブル(長さ約2m)		
GX、GF、GX-K、GF-K、GP、GR、MC	不要(D-sub 25 ピン、標準付属)	AX-K01710-200		
EK-i、EW-i、FC-i、FC-Si、GH、HR-i	不要(D-sub 9 ピン、標準付属)	AX-K02466-200		
AD-4212C	不要(D-sub 9 ピン、標準付属)	AD-4212C 標準付属		
HV-G、HV-WP、HW-G、HW-WP	不要(Din 7 ピン、標準付属)	AX-K01786-200		
FG	OP-03 (Din 7 ピン)	AX-K01786-200		
FG-L、FG-M	0P-23 (Din 8 ピン)	AX-K01786-200		

※ 最新情報はA&Dホームページを参照して下さい。

計量機器とコンピュータとの接続

注意

- □ AD-8526を既存のネットワークに接続する場合、ネットワーク管理者に相談してください。 |計量機器が原因でネットワークに障害が発生する可能性があります。また、問題が発生しても当社では一切の責任を負いかねます。
- □ 使用するACアダプタを間違えないために、「識別シール」をACアダプタとコードの終端付近に貼り付けてください。
- □ 計量機器の設定は一台ずつ行ってください。出荷時は同じ I P アドレス (172, 16, 100, 2) に設定されています。 IPアドレスを重複させないでください。
- □ IPアドレスをリセットすることはできません。(出荷時設定に戻せません) IPアドレスを入力するときは、IPアドレス記載シールに記録することを お勧めします。

進備

- ① 設定の手順「WinCT-Plus 取扱説明書」
- ② IP アドレス設定ソフト「Device Installer」
- ③ データ収集ソフトウェア「WinCT-Plus」を弊社ホームページより (https://www.aandd.co.jp/support/soft_download/weighing.html) ダウンロードしてください。
- 手順1 付属のACアダプタをAD-8526に差込みます。
- 手順2 コンピュータとAD-8526をクロスLANケーブルで直接接続 するか、またはハブを介してストレートケーブルで接続します。
- 手順3 コンピュータとAD-8526のIPアドレスとサブネットマスク を設定します。

設定方法は「WinCT-Plus 取扱説明書」を参照してください。 異なる手順で設定を行うと通信できなくなる場合があります。

- 手順4 設定した I P アドレスを「I P アドレス記載シール」に記入し、 AD-8526(および、必要に応じて計量機器)に貼付して ください。計量機器を識別しやすくなります。
- 手順5 データ収集ソフトウェア「WinCT-Plus」をコンピュータにインストール します。インストール方法は「WinCT-Plus 取扱説明書」を参照してください。
- 手順6 計量機器のRS-232CとAD-8526を付属のRS-232C ケーブルで接続します。

・タ通信ソフトウェアの概要

データ収集ソフトウェア「RsMulti」を起動します。「スタート」→「プログラム」→「A&D WinCT-Plus」→「RsMulti」。 「RsMulti」の取扱方法は、「A&D WinCT-Plus」→「取扱説明書」を参照してください。

- □ 1台のコンピュータでLANまたはRS-232Cに接続した複数の計量器のデータを収集できます。
- □ コンピュータのコマンドにより計量器をコントロールできます。
- □ 計量器から転送されたデータを収集できます。(例) 天びんの PRINT キー押してデータを出力し、収集する。
- 記録したデータを Excel で開くことができます。(Microsoft 社製 Excel を事前にインストールする必要があります。)

設定例





New.csv 05/04/12 11:23:16 GX-600 GP-30K A&D Company,Limited 11:19:43 ST +0182.252 g 11:20:02 ST +019218.1 1:19:49 ST +0182.253 g 11:20:05 ST +019218.2 5 sec 1:21:07 ST +0182.955 g 11:20:12 ST +019218.2 g 11:20:39 ST +019289.8 11:21:12 ST +0182.964 g 11:20:47 ST +019218.2 11:21:17 ST +0182.965 ~ 1:21:33 ST +0186.676 g 11:23:02 ST +019218.4 g 11:23:09 ST +019218.0 1:21:41 ST +0182.251 1:21:51 ST +0182.251 a 11:23:16 ST +019218.0 1:22:00 ST +0182.965 1:22:30 ST +0182.265 1:22:33 ST +0182.252 1:22:40 ST +0182.239

「RsMulti」の画面例

AD-8526 Ethernet Converter Instruction Manual



A&D Company, Ltd.

The AD-8526 Ethernet Converter can connect the RS-232C interface of a weighing instrument to the Ethernet (LAN) port of a computer that is not equipped with an RS-232C interface. By using the AD-8526, weight data from a weighing instrument can be managed with a computer connected to the network. The weighing instrument can also be controlled by the connected computer.

Unpacking the AD-8526



Weighing Instrument Cables

Required AD-8526 Cable by Weighing Instrument

Weighing instrument	Interface option	Communications cable (Length 2 m)		
GX, GF, GX-K, GF-K, GP, GR, HR, MC	None (D-Sub 25-pin, standard accessory)	AX-KO1710-200		
EK- <i>i</i> , EW- <i>i</i> , FC- <i>i</i> , FC-S <i>i</i> , GH, HR- <i>i</i>	None (D-Sub 9-pin, standard accessory)	AX-KO2466-200		
AD-4212C	None (D-Sub 9-pin, standard accessory)	AD4212C standard accessory		
HV-G, HV-WP, HW-G, HW-WP	None (DIN 7-pin, standard accessory)	AX-KO1786-200		
FG	OP-03 (DIN 7-pin)	AX-KO1786-200		
FG-L, FG-M	OP-23 (DIN 8-pin)	AX-KO1786-200		

Please refer to our website for the latest information.

Connecting the Weighing Instrument to a Computer

Caution

- Contact your network manager before connecting the AD-8526 to a network. The AD-8526 may generate a network error. A&D assumes no responsibility for any errors that may be caused.
- Affix the AC adapter labels to the AC adapter and the connector end of the cable.
- Set the IP address and subnet mask to the AD-8526 one at a time. The factory default IP address is 172.16.100.2. Do not duplicate an IP address.
- The IP address cannot be returned to the factory setting. We recommend that you write the IP address on the supplied label.

Please download each software from A&D website (https://www.aandd.jp/products/software/software.html) for below.

- (1) Setting procedure "WinCT-Plus" instruction manual

- Step 2 Connect the AD-8526 and the computer with a cross cable directly or connect them with a hub and straight
- Step 3 Input the IP addresses and subnet masks of the AD-8526 and computer. For the setting procedure, refer to the

Communication error may occur if set incorrectly.

- Step 4 Write the IP address on the IP address label and affix it on the AD-8526 (and the weighing instrument if necessary)
- Step 5 Install the RsMulti data acquisition software to download the "WinCT-Plus" instruction manual.PDF form A&D website. (https://www.aandd.jp/products/software/software.html)
- Step 6 Connect the accessory RS-232C cable between the RS-232C interface of the weighing instrument and the AD-8526's port.

The RSMulti data acquisition software can be launched on a Windows PC. Menu: [Start] → [Program] → [A&D WinCT-Plus] → [RsMulti]. Refer to the Manual PDF file in the A&D WinCT-Plus for details on the

- This software can acquire data from multiple devices connected by LAN or RS-232C.
- The software can control these devices with commands.
- The software can acquire data transmitted from devices. Example: When the **PRINT** key is pressed on the balance, data is output and is acquired with the computer.
- □ Stored data can be used with Excel. (Install Microsoft Excel before use.)

Example





A sample window of RsMulti

										<u> </u>
Copy(<u>C</u>)	Excel(E)									
							New.cs	V		
		05/04/12 11:23:16								
ann d inni	in al		GX-600				GP-30K			
iany,Lim	leu	1	11:19:43	ST	+0182.252	g	11:20:02	ST	+019218.1	g
.t		2	11:19:49	ST	+0182.253	g	11:20:05	ST	+019218.2	g
5	sec	3	11:21:07	ST	+0182.955	g	11:20:12	ST	+019218.2	g
ı		4	11:21:12	ST	+0182.964	g	11:20:39	ST	+019289.8	g
•	-	5	11:21:17	ST	+0182.965	g	11:20:47	ST	+019218.2	g
		6	11:21:33	ST	+0186.676	g	11:23:02	ST	+019218.4	g
art C	ormand	7	11:21:41	ST	+0182.251	g	11:23:09	ST	+019218.0	g
		8	11:21:51	ST	+0182.251	g	11:23:16	ST	+019218.0	g
		9	11:22:00	ST	+0182.965	g				
		10	11:22:30	ST	+0182.265	g				
		11	11:22:33	ST	+0182.252	g				
		12	11:22:40	ST	+0182.239	g				
										_