FXi-08 イーサネット・インタフェース

AND 株式エー・フェル・ディ

イーサネット・インタフェース(FXi-08)を当社の天びん(FX-i、FZ-i、HR-A、HR-AZ、GX-A、GF-A)シリーズに 組み込むと、イーサネット(LAN)通信が可能となり、ネットワークを利用した計量データの管理が可能になります。



取付方法

- (注) 天びんからACアダプタを外した状態で、以下の作業を行って ください。
- 手順1 IP アドレスを設定する際に、FXi-08 を個体識別するための MAC アドレス[※] (ハードウェアアドレス) が必要となる場合 がありますので、記載された MAC アドレス(右図参照)を 記録しておいてださい。

※ 例:00-20-4A-84-23-6A

手順2 天びん背面のパネルとネジ(2本)を外します。 パネルに両面テープで貼り付いているケーブルのコネクタを 剥がし、天びんのケースの外に出します。

手順3 コネクタを FXi-08 に差し込みます。

手順4 FXi-08を装着し、手順2で外した2本のネジで固定します。





FXi-08 とコンピュータとの接続

注意

- □ FXi-08 を既存のネットワークに接続する場合は、必ずネットワーク管理者に相談してください。 FXi-08 が原因でネットワークに障害が発生する可能性があります。また、障害が発生しても当社ではネットワークに 関する一切の責任を負いかねますのでご了承願います。
- □ FX*i*-08の設定は一台ずつ行ってください。出荷時は同じ IP アドレス (172.16.100.2) に設定されています。 IP アドレスを重複させないでください。
- □ **IP** アドレスをリセットすることはできません。(出荷時設定に戻せません) IP アドレスを入力するときは、IP アドレス記載シールに記録することをお勧めします。 進備

- ① 設定の手順「WinCT-Plus 取扱説明書
- ② IP アドレス設定ソフト「Device Installer」
- ③ データ収集ソフトウェア「WinCT-Plus」を弊社ホームページより (https://www.aandd.co.jp/support/soft_download/weighing.html) ダウンロードしてください。
- 手順1 コンピュータと FXi-08 をハブを介してストレートケーブルで接続します。 (ハブを使用しないで直接接続する場合は、クロスLANケーブルを使用し てください。)
- 手順2 天びんに付属のACアダプタを天びん本体に差込みます。
- 手順3 コンピュータと FXi-08 の IP アドレスとサブネットマスクを設定します。 設定方法は「WinCT-Plus 取扱説明書」を参照してください。 異なる手順で設定を行うと通信できなくなる場合があります。
- 手順4 設定した IP アドレスを「IP アドレス記載シール」に記入し、適当な場 所に貼付してください。(天びんの識別がしやすくなります。)
- 手順5 データ収集ソフトウェア「WinCT-Plus」をコンピュータにインストールし ます。インストール方法は「WinCT-Plus 取扱説明書」を参照してください。

-タ通信ソフトウェアの概要

データ収集ソフトウェア「RsMulti」を起動します。「スタート」→「プログラム」→「A&D WinCT-Plus」→「RsMulti」。 「RsMulti」の取扱方法は、「A&D WinCT-Plus」→「取扱説明書(OP-08 用)」を参照してください。 □ 1台のコンピュータでLANまたはRS-232Cに接続した複数の計量器のデータを収集できます。 □ コンピュータのコマンドにより計量器をコントロールできます。

🖡 RsMulti Ver.1.1

le(E) Config(

A&D Co

Manual/Rei

Test

Connect Name ∎ FX=300i ✓ FX-3000i

Repeat Command Da □ A11

- 数が制限されることがあります。

設定例





□ 計量器から転送されたデータを収集できます。(例) 天びんの **PRINT** キー押してデータを出力し、収集する。 □ 記録したデータを Excel で開くことができます。(Microsoft 社製 Excel を事前にインストールする必要があります。) □ 接続できる計量器は、最大で100台までです。ただし、コンピュータの性能やデータ取込みの頻度により接続できる

	100111									
P								- 0	x	
Copy(<u>C</u>) Excel(<u>E</u>)										
	Example 05/04/12 11:23:16									
n one d inside d	FX-300)i			FX-3000i					
panyumiea	1 11:19:	43 ST	+0018.225	g	11:20:02	ST	+02019.24	g		
at	2 11:19:	49 ST	+0018.225	g	11:20:05	ST	+02019.26	g		
5 sec	3 11:21:	07 ST	+0016.295	g	11:20:12	ST	+02019.28	g		
a	4 11:21:	12 ST	+0018.226	g	11:20:39	ST	+02232.58	g		
	5 11:21:	17 ST	+0018.223	g	11:20:47	ST	+02019.27	g		
	6 11:21:	33 ST	+0019.667	g	11:23:02	ST	+02019.27	g		
tart Command	7 11:21:	41 ST	+0018.225	g	11:23:09	ST	+02019.26	g		
	8 11:21:	51 ST	+0018.225	g	11:23:16	ST	+01863.45	g		
	9 11:22:	00 ST	+0018.224	g						
	10 11:22:	30 ST	+0018.226	g						
	11 11:22:	33 ST	+0018.225	g						
	12 11:22:	40 ST	+0016.293	g						
	13 11:22:	53 ST	+0018.225	g						

[RsMulti]の画面例

FXi-08 Ethernet Interface

A&D Company, Limited

When this Ethernet interface (FXi-08) is installed into the A&D balances such as FX-i, FZ-i, HR-A, HR-AZ, GX-A and GF-A, the balances can communicate with a computer through the LAN port and the weighing data can be managed with the software "WinCT-Plus".



Affix a protective cover over the IP address label.

Installing the Ethernet Board

- Caution: Remove the AC adapter from the balance before doing the following work.
- Step 1 Record the MAC address* (Hardware address) printed on the FXi-08 (Shown in the illustration). The MAC address is required when specifying the IP address.

* Example: 00-20-4A-84-23-6A

- Step 2 Unfasten the two screws from the rear of the balance and remove the panel. Peel the connector off that is attached on the panel with double-side adhesive tape.
- Step 3 Connect the connector to the **FX***i***-08**.
- Step 4 Install the FXi-08 in the balance and secure it using the two screws in step 2.





Connecting the Ethernet Board to a Computer

Caution

- □ Contact the network manager before connecting the FX*i*-08 to a network. A network error may occur due to the FX*i*-08. A&D and dealers assume no responsibility for errors.
- \square Preset the IP address and subnet mask into the FX*i*-08 one by one. The IP address, 172.16.100.2, is set for all FXi-08 at the factory. Do not duplicate IP addresses.
- The IP address cannot be restored to factory setting. We recommend that you write the IP address on the supplied label.

Preparation

Please download each software from A&D website

- (https://www.aandd.jp/products/software/software.html) for below.
- (1) Setting procedure "WinCT-Plus" instruction manual
- (2) IP address setting software "Device Installer"
- (3) Data acquisition software "WinCT-Plus"
- Step 1 Connect the Ethernet board and the computer using a hub and straight cables. (When connecting directly without using a hub, use a cross cable)
- Step 2 Reconnect the AC adapter to the balance.
- Step 3 Preset the IP addresses and subnet mask of the FXi-08 and the computer. For the setting procedure, refer to the "WinCT-Plus" instruction manual.

A communication error may occur with the wrong operation.

- Step 4 Write the IP address on "IP address label" and affix it where you can see the address easily.
- Step 5 Install the data acquisition software to refer to the "WinCT-Plus" instruction manual.

The Outline for Windows Communication Software

Run the data acquisition software "RsMulti". Menu: [Start] \rightarrow [Program] \rightarrow [A&D WinCT-Plus] \rightarrow [RsMulti]. Refer to the [A&D WinCT-Plus] \rightarrow [Manual (for the OP-08)] for the operation.

A&D Co

Manual/Rer

Repeat Command D

Test

Connect Name

3 FX - 300i ✓ FX-3000i

🗆 A11

- □ The software can acquire data from multiple devices connected with a LAN or RS-232C.
- □ The software can control these devices with commands.
- The software can acquire data transmitted from devices. Example: When the PRINT key of the balance is pressed, data is output and is acquired with the computer.
- □ The stored data can be used with the Microsoft EXCEL, when it is installed before use.
- Up to 100 weighing instruments can be connected. However, the number of connections may be

restricted depending on the computer's performance and the frequency of data acquisition. Example





A sample window of the "RsMulti"

P									_ (m)	x
Copy(C) Excel(E)										
	Example 05/04/12 11:23:16									
up cupy d inside of		FX-300i				FX-3000i				
ipany,Limilea	1	11:19:43	ST	+0018.225	g	11:20:02	ST	+02019.24	g	
at	2	11:19:49	ST	+0018.225	g	11:20:05	ST	+02019.26	g	
5 sec	3	11:21:07	ST	+0016.295	g	11:20:12	ST	+02019.28	g	
a	4	11:21:12	ST	+0018.226	g	11:20:39	ST	+02232.58	g	
	5	11:21:17	ST	+0018.223	g	11:20:47	ST	+02019.27	g	
	6	11:21:33	ST	+0019.667	g	11:23:02	ST	+02019.27	g	
tart Command	7	11:21:41	ST	+0018.225	g	11:23:09	ST	+02019.26	g	
	8	11:21:51	ST	+0018.225	g	11:23:16	ST	+01863.45	g	
	9	11:22:00	ST	+0018.224	g					
	10	11:22:30	ST	+0018.226	g					
	11	11:22:33	ST	+0018.225	q					
	12	11:22:40	ST	+0016.293	q					
	13	11:22:53	ST	+0018.225	q					
					5					
	<u> </u>		_							